


**UNIC URW-547/506/706 – HELPDESK**

**Operating the Carrier**


1: Is the crane stored properly?

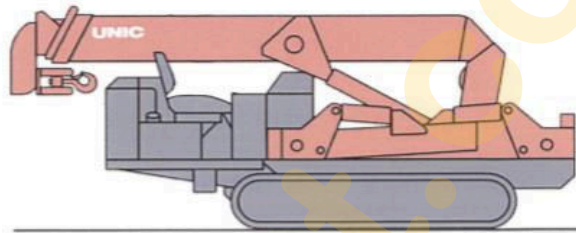


2: Start the engine.





3: Pull the interlock device down to the drive position.

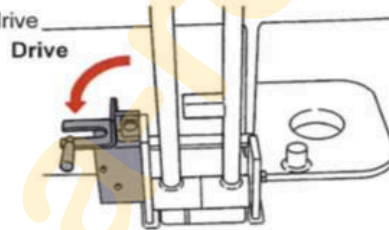

4: Use the drive lever to go forward, reverse or neutral.

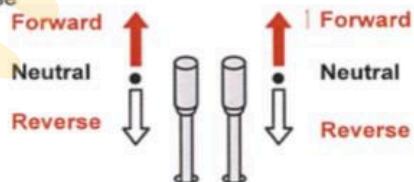

5: Press/release the gas pedal to speed up/slow down.

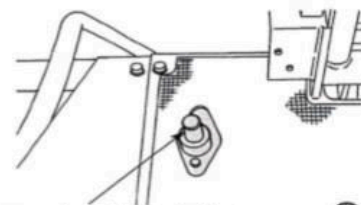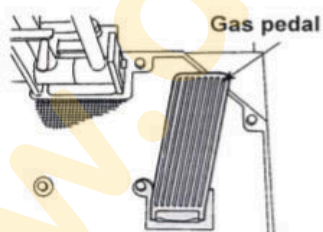

**Drive speed switchover button**  
To go faster, press the switchover button for the drive gear.



**Outrigger selector switch**



**Voice switch**

## How to operate outriggers by manual lever.

However, this operation is possible under the following condition.

- 1) Starter switch on.



- 2) Shift the lever to "Crane" position.



- 3) Operation mode switch is changed to the outrigger side.  
Outrigger mode indicator lamp lights on.



- 4) There are four (4) outrigger control switches and each switch is numbered. Select an outrigger control switch to throw it to desired function and operate the outrigger lever accordingly.





Hoe radiosturing gebruiken?



Stap 1: NOODSTOP VRIJGEVEN

Stap 2: CONTACTSLOT OP "ON" ZETTEN

Stap 3: MODE SWITCH OP "REMOTE" ZETTEN

Stap 4: DRUK 1X OP DE RODE KNOP (claxon/start)

Stap 5: LAMPJE "VITESSE" BRANDT ROOD

Stap 6: DRUK 1X OP DE RODE KNOP (claxon/start)

Stap 7: DE KRAAN CLAXONNEERT EN NU IS DE BEDIENING KLAAR OM TE WERKEN

Indien er verdere problemen zijn, bel dan naar + 32 56 222 111.